9668 Madison Blvd., Suite 202
Madison, AL 35758
support.geocue.com
support@geocue.com

## TerraModeler Main Toolbox

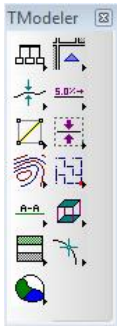


| | | | |
|---|---|---|---|
| | General Toolbar | | Create Surfaces Toolbar |
| | Draw using Surface Toolbar | | Drawing Utilities Toolbar |
| | Edit Point Toolbar | | Edit Area Toolbar |
| | Display Surface Toolbar | | Display Regions Toolbar |
| | Profiles Toolbar | | Quantity Toolbar |
| | Domains Toolbar | | Display Single Toolbar |
| | Regions Toolbar | | |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Settings | | Set Scale | | Save Surfaces | | Help On TerraModeler |
| | Define Coordinate Setup | | Surfaces | | About TerraModeler | | |




| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Triangulate Survey | | Triangulate Elements | | Insert Breakline Element | | Rebuild Models |
| | Triangulate View | | Insert Random Element | | Insert Multiple Sources | | |




| | | | | | |
|---|---|---|---|---|---|
| | View Elevation | | View Slope | | Calculate Slope |
| | Compare Elevations | | Drop Element On Surface | | Fill Area With Cells |

9668 Madison Blvd., Suite 202
Madison, AL 35758
support.geocue.com
support@geocue.com




| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Measure Slope | | Force Downstream Flow | | Connect Linear Elements | | Fix Touching Elements |
| | Label Elevation | | Set Linear Elevation | | Copy Linear Element | | Read Piles from File |
| | Label Area | | Thin Linear Element | | Alignment Offset | | |
| | Place Sloped Line | | Densify Linear Element | | Validate Linear Elements | | |

| | | | | | |
|---|---|---|---|---|---|
| | Construct Breakline | | Insert Point | | Remove Point |
| | Insert Point Along Breakline | | Move Point | | Exclude Triangle |

| | | | | | |
|---|---|---|---|---|---|
| | Flatten Area | | Drop Area | | Insert Hole Element |
| | Move Area | | Exclude Area | | Remove Area |




| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Display Contours | | Display Elevation Texts | | Update Displays | | Label Peaks and Pits |
| | Display Triangles | | Display Slopes | | Erase Display | | |
| | Display Grid | | Display Shaded Surface | | Display Boundary | | |




| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Display Drainage | | Display Themes | | Display Region Triangles | | Display Raster Triangles |

9668 Madison Blvd., Suite 202
Madison, AL 35758
support.geocue.com
support@geocue.com




| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Draw Section View | | Update Profile | | Project From Profile | | Output Section Elevations |
| | Draw Profile | | Setup Automatic Sections | | Label Profile Elevations | | |
| | Draw Alignment Sections | | Project Info Profile | | Output Profile Elevations | | |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Compute Quantity | | Compute Alignment Quantity | | Compute Section Quantity | | Draw Surface Intersection |
| | Compute Prismoidal Quantity | | Define Section Templates | | Compute Tunnel Volume | | Compute Area |




| | | | | | |
|---|---|---|---|---|---|
| | Define Domains | | Set Area Domain | | Set Triangle Domain |
| | Domain View | | Set Domain Between Lines | | Display Domain Triangles |




| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | Place Contour | | Place Elevation Text | | Place Slope Arrow | | Modify Contour Symbology |

| | | | | | |
|---|---|---|---|---|---|
| | Regions | | Delete Region | | Move Region Center |
| | Create Region | | Edit Region Info | | Update Regions |

9668 Madison Blvd., Suite 202
Madison, AL 35758
support.geocue.com
support@geocue.com

## Common MicroStation v8i™ Tools

| | | | | | |
|---|---|---|---|---|---|
| | Element Selection | | View Control: Update View | | Modify: Modify Element |
| | Fence: Place Fence | | Change Attributes: Change Element Attributes | | Delete Element |
| | Manipulate: Copy | | Groups: Drop Element | | Measure: Measure Distance |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | View Attributes | | Zoom Out | | Navigate Camera | | Set Display Depth |
| | Open Display Style Dialogue | | Window Area | | View Previous | | Set Active Depth |
| | Adjust View Brightness | | Fit View | | View Next | | Clip Volume |
| | Update View | | View Rotation: Rotate View | | Copy View Parameters | | Clip Mask |
| | Zoom In | | Pan View | | Change View Perspective | | |




| | | | | | |
|---|---|---|---|---|---|
| | Modify Element | | Trim Intersection | | Insert Vertex |
| | Break Element | | Trim To Element | | Delete Vertex |
| | Extend Line | | Trim Multiple | | Construct Circular Fillet |

™ Bentley Systems, Incorporated