

GeoCue 8/16/2023 Version 1.0

Payload Adapter Installation Guide for the IF1200A





TABLE OF CONTENTS

Payload Adapter Installation Items	2
IF1200A Third Party Integration	
IF1200A Third Party Integration: Payload Adapter	4
IF1200A Third Party Integration: AV18 Antenna Mast Installation	6
Disposal	9
Support	9
Table of Tables	10
Table of Figures	10



PAYLOAD ADAPTER INSTALLATION ITEMS

Item number	Part Name A	Article Number	
1	IF1200A Antenna mount	n/a	1
2	AV18 antenna (not included) *	ANT1000705A00T	1
3	VAR6 Front-latch tube mount assembly	ASY1001068A01N	1
4	M ₃ x8 mm flat head screws	HDW1001301A00N	4
5	3ft Cable Right Angle SMB Jack to Right Angle SMA Jack (not pictured)	CAB1000799A00T	1
6	Loctite Threadlocker Blue 243 (not pictured)	MIS1000254A00N	1

^{*}AV18 antenna is not included in this kit and should be included in your payload kit.

Table 1. List of payload adapter installation items.



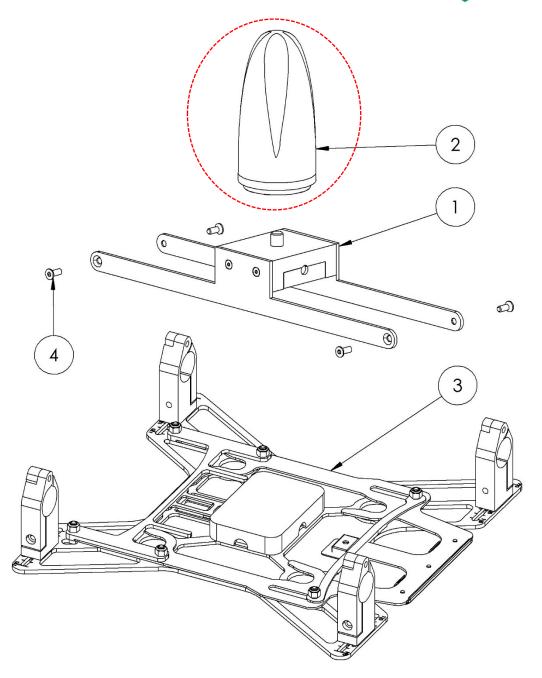


Figure 1. Payload adapter installation items.



IF1200A Third Party Integration

IF1200A Third Party Integration: Payload Adapter

1. Position the Payload Adapter so the XYZ coordinate axis symbol of the Payload Adapter is facing the front of the IF1200A.

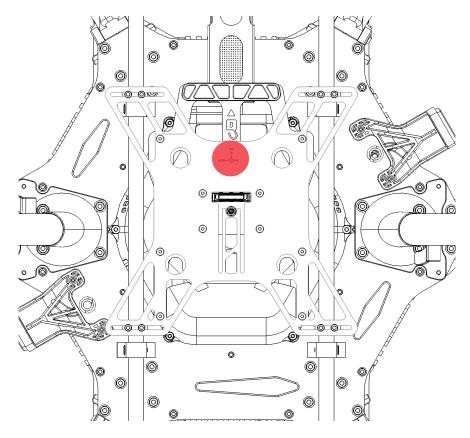


Figure 2. Position payload adapter.

2. Unscrew the four (4) Gremzy 12mm tube mount clamps so they are in the open position.



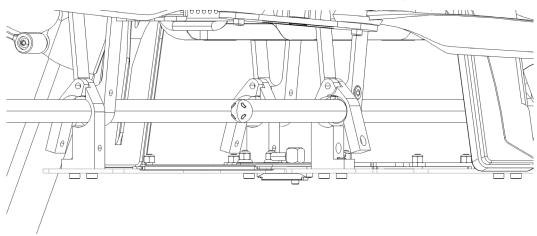


Figure 3. Unscrew tube mount clamps to open position.

3. Install the payload adapter onto the IF1200A and tighten the four (4) Gremzy 12mm tube mount clamps loosely so the payload adapter can slide to adjust into position.

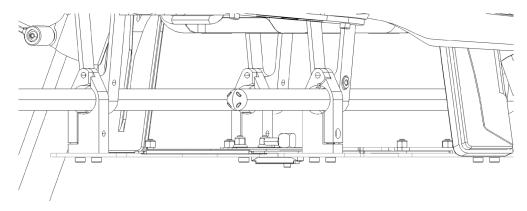


Figure 4. Slide payload adapter into position.

- 4. Make sure the orientation of the main plate is correct. See step 1.
- 5. Position the payload adapter so the front two payload adapter-side tube mount clamps are coincident Make sure the antenna cable properly exits the case.



IF1200A Third Party Integration: AV18 Antenna Mast Installation

- 1. Position the antenna assembly so the antenna cable is exiting towards the port side of the IF1200A drone.
- 2. Using two (2) M₃x 8mm flat head screws tighten the antenna assembly to the IF1200A drone body.

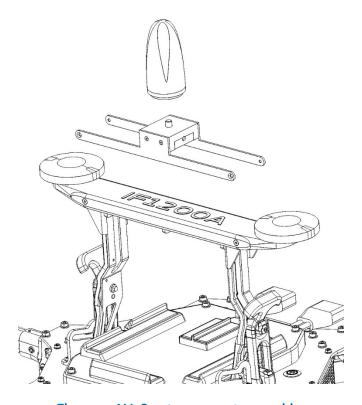


Figure 5. AV18 antenna mast assembly.

3. To route the antenna cable, run the cable from the payload adapter to the antenna following the detailed route shown below.



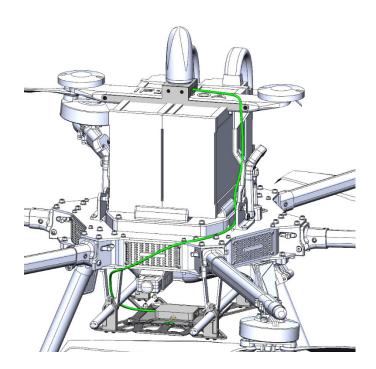


Figure 6. Antenna cable routing.

4. Attach the cable using zip-ties along the route of the cable, as follows:



Figure 7. Attach the cable using zip-ties.



5. Install and tighten the AV18 antenna to the antenna mount assembly.

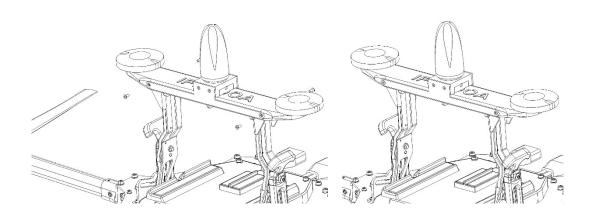


Figure 8. Install and tighten the AV18 antenna to the mount assembly.



DISPOSAL



Do not put batteries or other electrical equipment into general waste containers. Substances in batteries are harmful to human health and the environment. Dispose of electrical equipment at a collection point or recycling center. Contact your local authority for detailed information.

SUPPORT

Our searchable support knowledge base contains information on workflows, tips, hints, and probable resolutions to error messages or commonly encountered situations.

Normal support business hours are **Monday - Friday**, **8 AM — 5 PM** USA Central Time.

Our GeoCue Support website contains general workflow information, in addition to specific issue and error messages that you may encounter. Click on the link and search for information contained in the knowledge base.

If a support request is sent during business hours a representative will typically get back to you within 4 hours. If received after hours, a response will be sent the following day. To speed response time please include the following information in your request:

- Contact information please include e-mail address and phone number
- Company name
- Product name and version number
- Model and Serial Number

If your request includes problems pertaining to a specific error message, please include a screenshot of the error message.

For hardware and software support contact: support@geocue.com



TABLE OF TABLES

Table 1 List a	اممماليمميا		ممنهمالمهمت	it a sea	-
Table T. LIST O	i payioau	adapter	installation	items	

TABLE OF FIGURES

Figure 1. Payload adapter installation items.	. 3
Figure 2. Position payload adapter	
Figure 3. Unscrew tube mount clamps to open position.	
Figure 4. Slide payload adapter into position.	
Figure 5. AV18 antenna mast assembly.	
Figure 6. Antenna cable routing.	. 7
Figure 7. Attach the cable using zip-ties.	. 7
Figure 8. Install and tighten the AV18 antenna to the mount assembly	